


上电自动运行

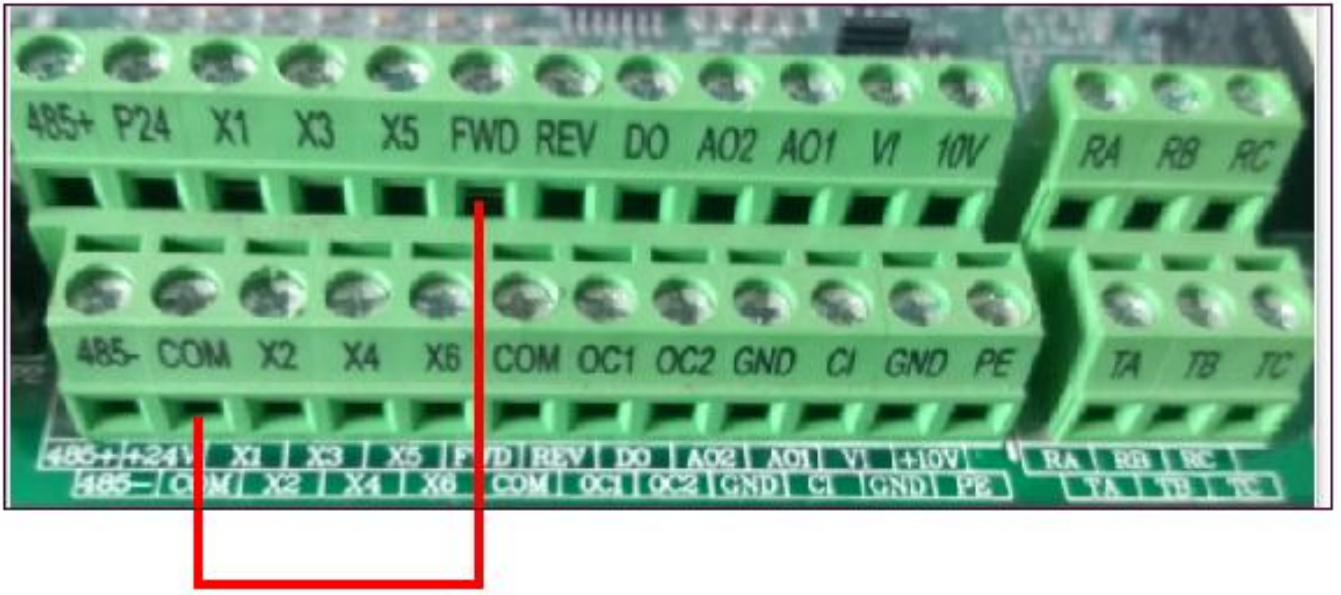

参数设置：

F0.15=1

设置按键步骤：

- 1.按  显示**F0.00**
- 2.按  显示**F0.15**
- 3.按  显示**0**
- 4.按  显示**1**
- 5.按  显示**F0.16**
- 6.按  2次退出
- 7.调试完成关电重启后运行